



SHOK

 
 
RÉFÉRENCES

Références	Désignation
SHOKV1	Déclencheur manuel 1 contact Manual call point 1 contact
SHOKV2	Déclencheur manuel 2 contacts Manual call point 2 contacts
SHOKV3	Déclencheur manuel 2 contacts et Buzzer / LED Manual call point 2 contacts and Buzzer / LED
SHOKV4	Déclencheur manuel 2 contacts avec détection d'ouverture du capot et Buzzer / LED Manual call point 2 contacts with cover opening detection and Buzzer / LED

CARACTÉRISTIQUES TECHNIQUES - TECHNICAL SPECIFICATIONS


Caractéristiques générales du déclencheur manuel - General specifications of the manual call point

Tension d'alimentation / Operating voltage : 12-24V DC (+10%)
Consommation / Consumption : 12V DC - max. 45 mA / 24V DC - max. 62 mA
Pouvoir de coupure / Switching rate (C/NO/NC) : 250V AC - 5 A / 30V DC - 4 A
Indice de protection / IP rating : IP 40 (utilisation à l'intérieur uniquement / only for indoor use)
Section des conducteurs / Conductor's cross section : max 1 mm²
Température de fonctionnement / Operating temperature : 0 / +50°C
Poids / Weight : 0,17 kg


KIT				
Clé de réarmement Reset Key	Capot de protection Protection cover	Vis du capot pour pose applique Cover screw for surface mounting	Vis + écrou pour pose semi-encastrée Cover screw and nut for semi-flush mounting	Plomb plastique vert Green plastic seal
x2	x1	x1	x1	x1
				
SHOK_K	SHOK_C (SHOKV1 - V2 - V3) SHOK_CA (SHOKV4)			SHOK_P

Montage semi-encasté / Semi-flush mounting

1

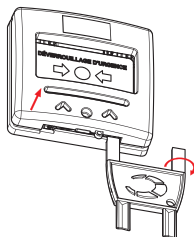

2

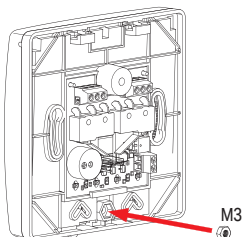


M3

3

Non fournies
Not provided


M3x16

Montage applique / Surface mounting

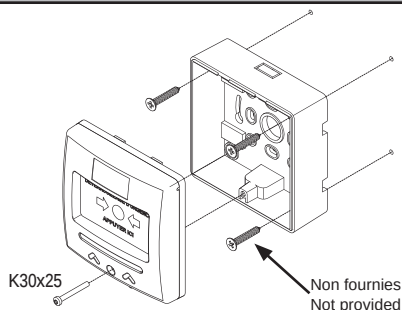Montage applique possible sur pot de 60 mm standard
Surface mounting possible with standard 60 mm outlet box


K30x25



Non fournies
Not provided

Non fournies
Not provided


K30x25


Mise en place du capot / Mounting of the cover

Montage applique
Surface mounted

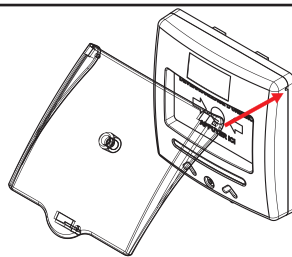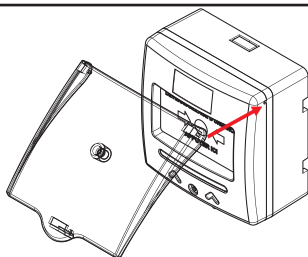Montage semi-encasté
Semi-flush mounted


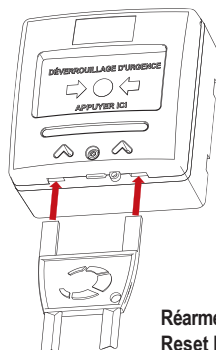
ENTRÉE GOULOTTE / CABLE DUCT ENTRY

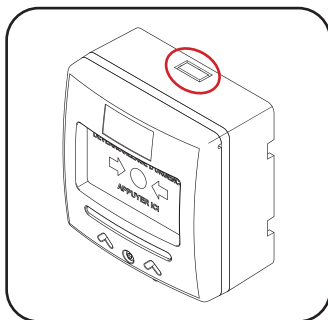

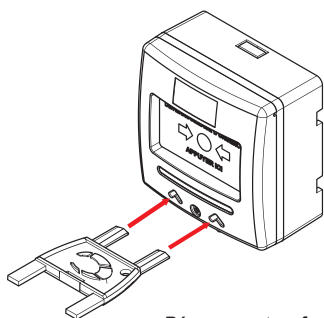

Réarmement en façade
Front reset


OU / OR



Réarmement par le dessous
Reset below


RANGEMENT DES CLÉS DE RÉARMEMENT / RESET KEY SLOTS

1

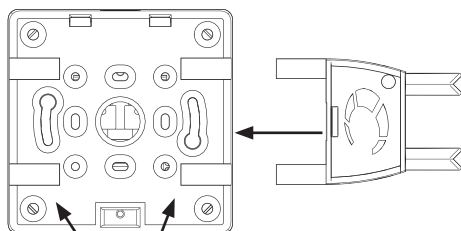


2 emplacements
2 slots

2

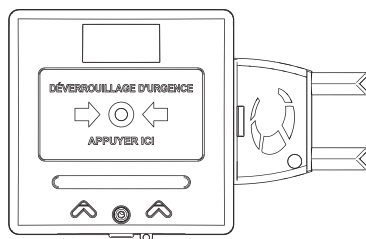

RACCORDEMENT - CONNECTION

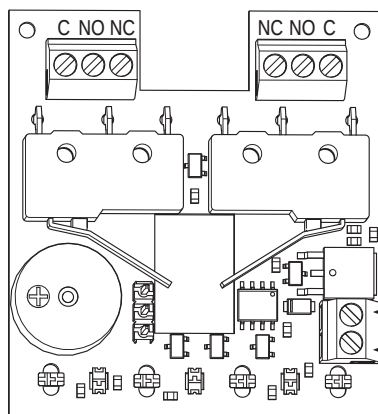

+12V DC (+10%)
+24V DC (+10%)
0V DC

Schéma du DM armé
Connecting whilst switched on

 
 

 
 

 
 
 



Schéma du DM désarmé (état d'origine)
Connecting whilst disarmed (factory setting)

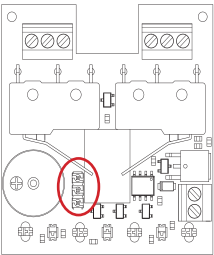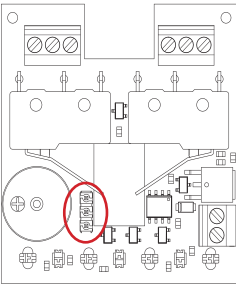

La carte électronique est solidaire du déclencheur manuel. Ne pas l'enlever !
The electronic board is fixed to the manual call point. Do not remove it!

SHOKV3	Cavalier / Jumper	ÉTAT DU BUZZER / STATE OF THE BUZZER
		Lors du déclenchement, le buzzer sonne en continu (ON - 70 dB) <i>When triggered, the buzzer sounds continuously (ON - 70 dB)</i>
		Buzzer inhibé (OFF) <i>Buzzer disabled (OFF)</i>
ÉTAT DES LEDS / STATE OF THE LEDS		
Déclencheur armé / Call point switched on		Vert / Green
Déclencheur désarmé / Call point disarmed		Rouge / Red
SHOKV4	Cavalier / Jumper	ÉTAT DU BUZZER / STATE OF THE BUZZER
		Lors de l'ouverture du capot, le buzzer sonne en discontinu (ON - 70 dB) <i>When the cover is opened, the buzzer sounds discontinuously (ON - 70 dB)</i>
		Lors du déclenchement, le buzzer sonne en continu (ON - 70 dB) <i>When triggered, the buzzer sounds continuously (ON - 70 dB)</i>
		Buzzer inhibé (OFF) <i>Buzzer disabled (OFF)</i>
ÉTAT DES LEDS / STATE OF THE LEDS		
Déclencheur armé / Call point switched on		Vert / Green
Déclencheur désarmé / Call point disarmed		Rouge / Red
Capot ouvert / Cover open		Blanc clignotant / Flashing white

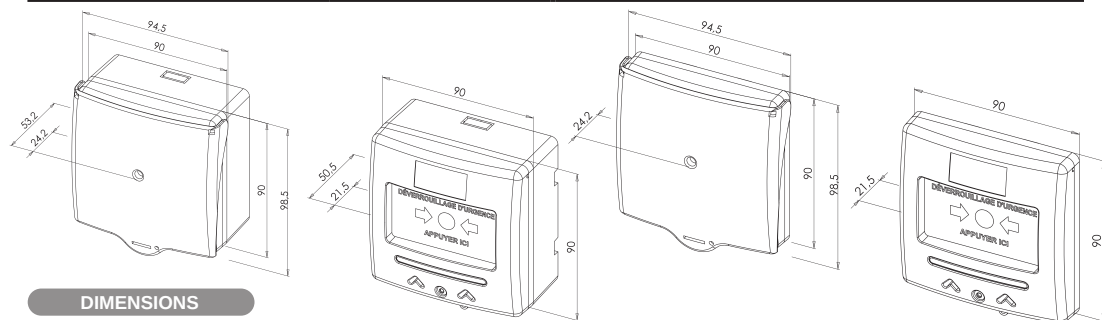

DIMENSIONS

